



Setting a Destination

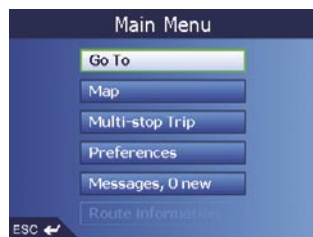

Click "Go To"



Make a selection

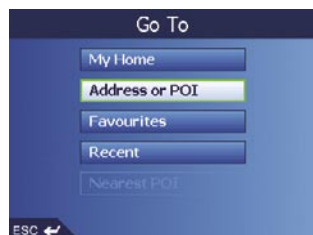

Click "Address or POI"



Select an intersection



Click "Find street"



Click "Go"



Select appropriate street





NAVMAN

Navman NZ Limited

7-21 Kawana Street, Northcote
PO Box 68 155 Newton
Auckland
New Zealand
Tel: +64 (0)9 481 0500
Fax: +64 (0)9 480 3176
Customer Support: fleet.support@navman.com
Website: www.navman.com

Navman Wireless Australia

Navman Australia Pty. Ltd
Suite 2, 408 Victoria Rd
PO Box 479
Gladesville NSW 2111
AUSTRALIA
Tel: +61 2 9879 9000
Fax: +61 2 9879 9001
Website: www.navman.com

Navman Wireless UK

Innovation Centre 2
Keele University Science Park
Keele, Staffordshire, ST5 5NH
UNITED KINGDOM
Tel: +44 (0) 1782 55 79 50
Fax: +44 (0) 1782 55 79 79
Email: info@navmanwireless.co.uk
Website: www.navmanwireless.co.uk

Navman Wireless NZ

7-21 Kawana St, Northcote
PO Box 68 155 Newton
Auckland
New Zealand
Customer Support and Info:
0800 GPS FLEET (0800 477 353)
Email: wirelessnzsupport@navman.com
Website: www.navman.com

NAVMAN

M-Nav 650

Quick Start Guide



Contents and Controls




Carry Case



RJ-45 cable

Mounting brackets:

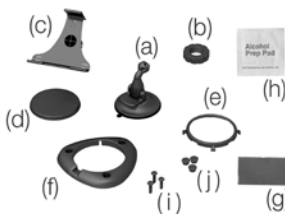

(a) Suction-cup/ballfoot

(f) Screw plate

(b) Locking-nut

(g) Adhesive tape

(c) Socket-clip

(h) Alcohol swab

(d) Baseplate

(i) 3 x Screws

(e) Retainer ring

(j) 3 x Screw caps



Documentation, including:

- User Manual
- Quick Start Guide
- Limited Warranty Agreement
- Registration Card

Zoom/Brightness

Change the amount of map area shown, or press and hold to adjust the screen brightness.

OK

Select the highlighted menu option, text or command.

Menu/Power

Press once to return to the Message List, twice for the Main Menu, or hold down for Standby Mode.

Volume

Press to hear the very next instruction, or hold down to adjust the voice guidance volume.

ESC


Cancels an action, deletes the last text character, returns to the previous screen or Map. Hold down to delete a line of text.


8-way toggle

Move up, down, left or right. Press up or down to adjust the viewing angle on the 3D Map screen.

Page


Change map views, including 3D Map* view. Use to view further screens if available.

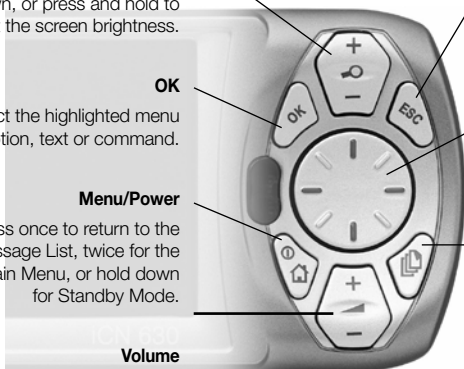

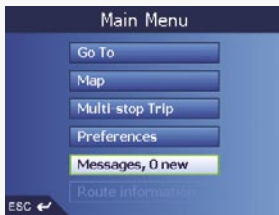


Routing to a Message Location



Select "**Messages**"

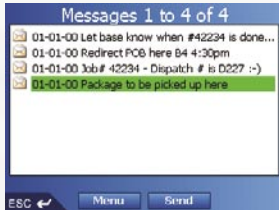

Select a Message

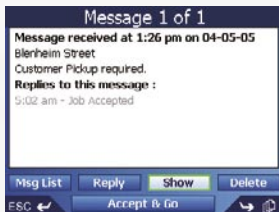

Select "**Show**" to save and confirm...

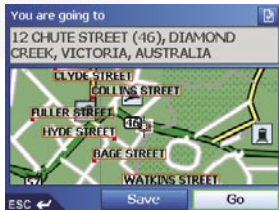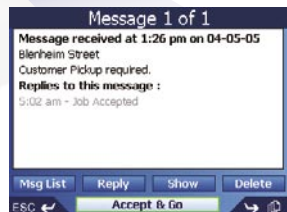


OR... Select "**Accept & Go**" to navigate NOW




Sending a Message


Select "**Messages**"

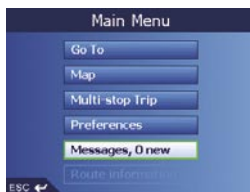

Select "**Send**"

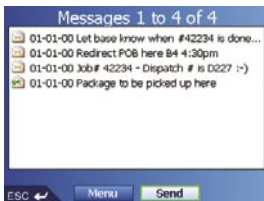

Select a Message

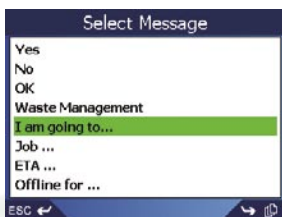

Edit and
Select "**Send**"

